SETUP FOR ACCESSORY PLOTTING KITS

CONTENTS

For Information About		Go to Page
Markers Supported		1
Application Assistance		1
Marker Card Setup	1492-PLATE2	2
Marker Card Setup	1492-PLTMURR, -WPLTMURR	3
Marking Rod Setup	1492-PLTMR, -WPLTMR	4
Adhesive Label / Paper Setup	1492-PLTDINA3, -WPLTDINA3	5
Entrelec Setup	1492-PLTENTR, -WPLTENTR	6
Phoenix Setup	1492-PLTPHX, -WPLTPHX	7
Sprecher & Schuh (V4/V5) / Wieland Setup	1492-PLTSSWIEL, -WPLTSSWIEL	8
Wago Setup	1492-PLTWAGO, -WPLTWAGO	9
Weidmüller Setup	1492-PLATE2	10
MURR PLASTIK Setup	1492-PLTMURR, -WPLTMURR	11

MARKERS SUPPORTED

Accessory Kit	Marker Type
Allen-Bradley Marker Cards	1492-SM5X10, 1492-SM6X10
Allen-Bradley Marker Cards	1492-SM9X20, 1492-SM10X17
Allen-Bradley Marking Rods	1492-MR9, 1492-MR15
Allen-Bradley Adhesive Labels	1492-AL9, 1492-AL15, 1492-N43, 1492-N5
Entrelec	RC55, RC510, RC65, RC610 (67 X 110mm only), RC810
Phoenix	ZB5, ZB6, ZB8, ZB10, ZBM, ZBM6
Sprecher & Schuh (V4/V5) / Wieland	Marker Sizes: 5x8.3, 6x8.3, 5x14, 6x14, 8x8.3
Wago	WSB 209-501, WSB 209-701
Weidmüller	DEK 5/5 MC, DEK 5/6 MC, DEK 5/6.5 MC WS 8/5 MC, WS 10/5 MC, WS 10/6 MC, WS 12/5 MC, WS 12/6 MC, WS 12/6.5 MC, WS 15/5 MC, MF 10/5 MC, MF 10/6 MC, PT-H 21 MC, TM-I 15 MC, ZS 10/5 MC, ZS 12/6 MC, ZS 15/5 MC
MURR PLASTIK	KSS20X9, KSP17X10

Marker geometries are subject to change without notice from manufacturers.
All marker types listed are compatible with the corresponding kits at the time of printing.

APPLICATION ASSISTANCE

For application assistance call our Toll-Free application hotline – 1-888-790-8377

ALLEN-BRADLEY

1492-SM5X10 AND 1492-SM6X10 MARKERS

1492-PLATE2

To setup the 1492-PLTKIT Plotter Using 1492-PLATE2 (see figure 1):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the 1492-PLATE2 Base Plate Shim by guiding the two pins on the plotter bed into the holes in the upper area of the shim.
4. Install the 1492-PLATE2 Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
5. Calibrate the plotter for the 1492-PLATE2 base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
6. Insert the appropriate spacer for the 1492-PLATE2 marker cards you intend to plot on. Note, there are 2 types of spacers for the 1492-PLATE2 plotting system. The spacers should provide support underneath the marker card so that is flat, and the frame of the marker card is resting on the base plate. If the spacer is too thick the frame of the marker card will not rest on the base plate. If the spacer is too thin, there will be excessive air space under the markers. In either case the plotter will not function properly.
7. Mount marker card(s) and plot.

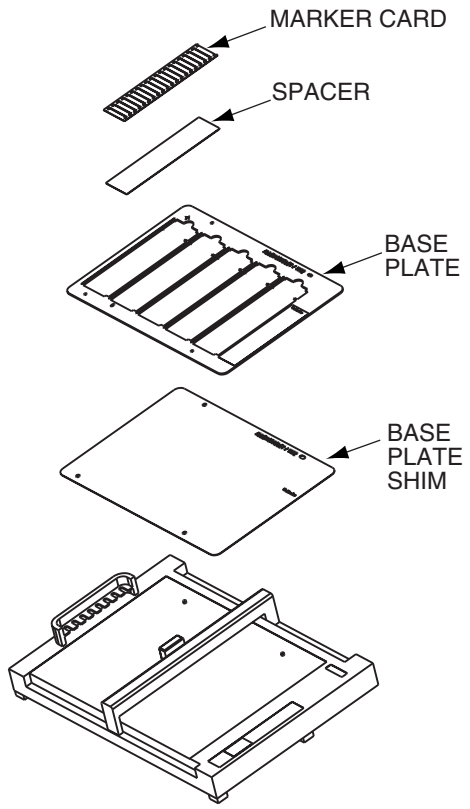

FIG. 1

ALLEN-BRADLEY

1492-SM9X20 AND 1492-SM10X17 MARKERS
1492-PLTMURR,
1492-WPLTMURR

To setup the 1492-PLTKIT Plotter Using 1492-PLTMURR (see figure 2):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the 1492-PLTMURR Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
4. Calibrate the plotter for the 1492-PLTMURR base plate. (same as in user manual, except no need for inserting spacer under base plate)
5. Insert the appropriate holder for the 1492-PLTMURR marker cards you intend to plot on.
6. Mount marker card(s) and plot.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTMURR (see figure 2, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the 1492-WPLTMURR Base Plate by placing the two pins in the base plate through the holes in the plotter bed.
4. Calibrate the plotter for the 1492-WPLTMURR base plate. (same as in user manual, except no need for inserting spacer under base plate)
5. Insert the appropriate holder for the 1492-WPLTMURR marker cards you intend to plot on.
6. Mount marker card(s) and plot.

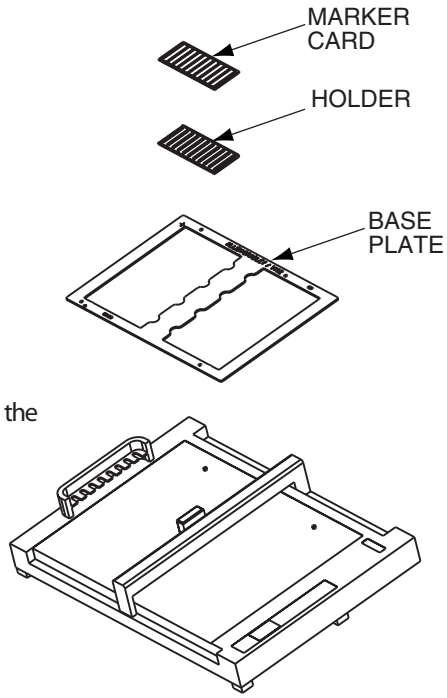

FIG. 2

ALLEN-BRADLEY

1492-MR9 AND 1492-MR15 MARKING RODS

1492-PLTMR

1492-WPLTMR

To setup the 1492-PLTKIT Plotter Using 1492-PLTMR (see figure 3):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Marking Rod baseplate by guiding the 2 pins on the plotter bed into the holes in the upper periphery of the base plate
4. Calibrate the plotter for the Marking Rod base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Place Marking Rods in the desired slot(s) of the baseplate. Ensure that the Marking Rod is pushed as far up as possible in the slot.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTMR (see figure 3, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Marking Rod base plate by placing the 2 pins in the base plate into the holes in the plotter bed.
4. Calibrate the plotter for the Marking Rod base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Place Marking Rods in the desired slot(s) of the baseplate. Ensure that the Marking Rod is pushed as far up as possible in the slot.

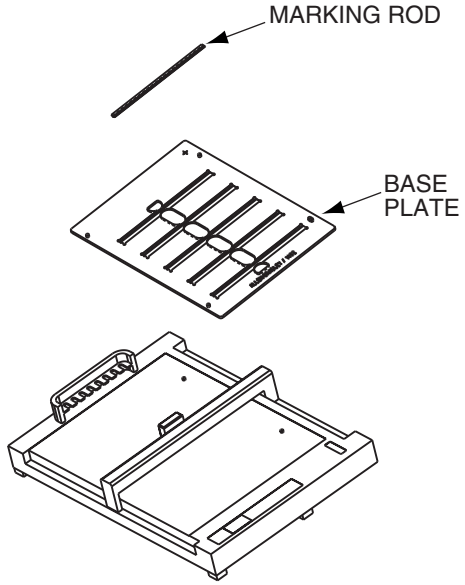

FIG. 3

ALLEN-BRADLEY ADHESIVE LABEL / PAPER (DIN A3)

1492-PLTDINA3,
1492-WPLTDINA3

To setup the 1492-PLTKIT Plotter Using 1492-PLTDINA3 (see figure 4):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Attach 8 of the 20 mm wide magnets stacked 2 high, in each of the 4 corners of the underside of the baseplate.
4. Install the DIN A3 Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
5. Calibrate the plotter for the DIN A3 base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
6. Place the desired adhesive label or paper sheet on top of the baseplate. Mount 8.5 x 11 (DIN A4) sheets "portrait" style. Mount 11 x 17 (or DIN A3) sheets "landscape" style
7. Place the 10 mm wide magnets on top of the sheet to hold it in place. Note, magnets may cover some of the printing area.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTDINA3 (see figure 4, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Attach 8 of the 20 mm wide magnets stacked 2 high, in each of the 4 corners of the underside of the baseplate.
4. Install the DIN A3 Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
5. Calibrate the plotter for the DIN A3 base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
6. Place the desired adhesive label or paper sheet on top of the baseplate. Mount 8.5 x 11 (DIN A4) sheets "portrait" style. Mount 11 x 17 (or DIN A3) sheets "landscape" style
7. Place the 10 mm wide magnets on top of the sheet to hold it in place. Note, magnets may cover some of the printing area.

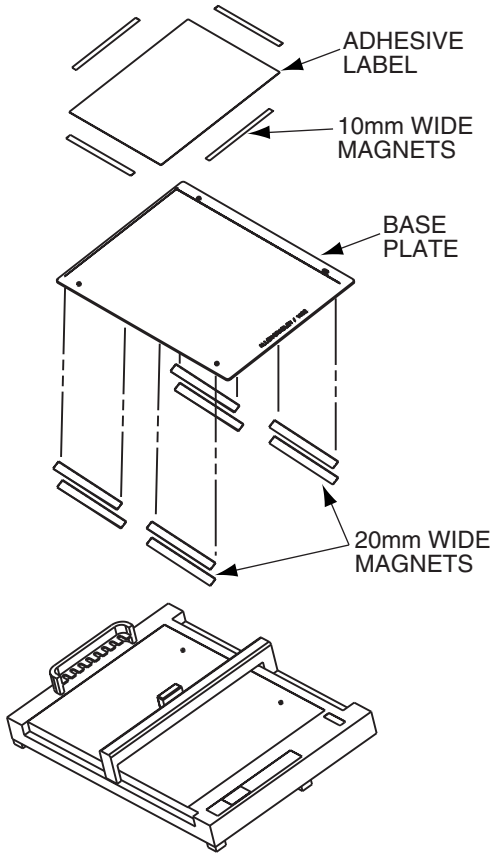

FIG. 4

ENTRELEC

1492-PLTENTR,
1492-WPLTENTR

To setup the 1492-PLTKIT Plotter Using 1492-PLTENTR (see figure 5):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Entrelec Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
4. Calibrate the plotter for the Entrelec base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate).
5. Remove protective backing from adhesive tape in each marker area.
6. Mount marker card(s) and plot.
   Note: Not all marker cards fit in all base plate locations. Base plate is engraved with the appropriate marker card dimensions for each location.
7. Optional Step. If tape loses its adhesiveness, remove tape and replace with 3M/Scotch™ poster tape #109.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTENTR (see figure 5, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Entrelec Base Plate by placing the two pins in the base plate through the holes in the plotter bed.
4. Calibrate the plotter for the Entrelec base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Remove protective backing from adhesive tape in each marker area.
6. Mount marker card(s) and plot.
   Note: Not all marker cards fit in all base plate locations. Base plate is engraved with the appropriate marker card dimensions for each location.
7. Optional Step. If tape loses its adhesiveness, remove tape and replace with 3M/Scotch™ poster tape #109.

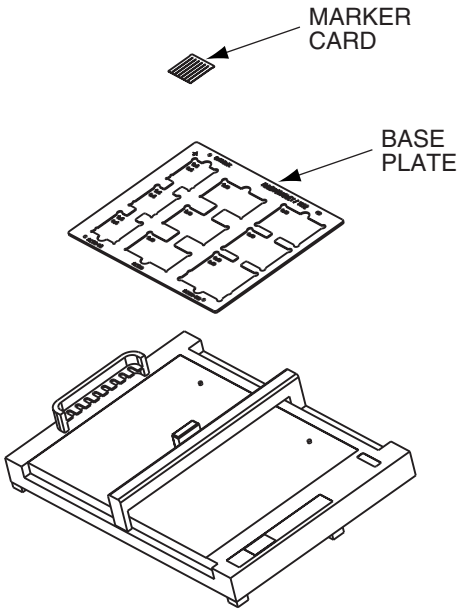

FIG. 5

PHOENIX

1492-PLTPHX,
1492-WPLTPHX

To setup the 1492-PLTKIT Plotter Using 1492-PLTPHX (see figure 6):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual.
2. Remove any previously installed Base Plate.
3. Install the Phoenix Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
4. Calibrate the plotter for the Phoenix base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Insert the appropriate holder for the Phoenix marker cards you intend to plot on.
6. Mount marker strip(s) and/or marker card(s) and plot.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTPHX (see figure 6, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual.
2. Remove any previously installed Base Plate.
3. Install the Phoenix Base Plate by placing the two pins in the base plate through the holes in the plotter bed.
4. Calibrate the plotter for the Phoenix base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Insert the appropriate holder for the Phoenix marker cards you intend to plot on.
6. Mount marker strip(s) and/or marker card(s) and plot.

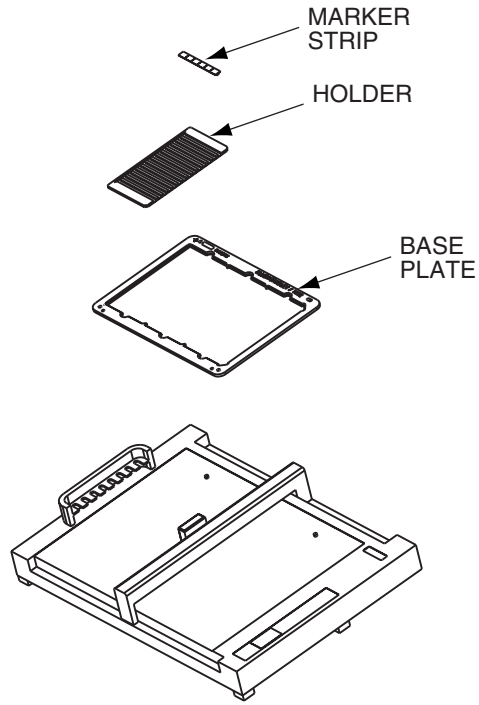

FIG. 6

SPRECHER & SCHUH / WIELAND

1492-PLTSSWIEL,
1492-WPLTSSWIEL

To Setup the 1492-PLTKIT Plotter Using 1492-PLTSSWIEL (see figure 7):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the S + S / Wieland Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
4. Calibrate the plotter for the S + S / Wieland base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Mount marker card(s) and plot.
   Note, not all marker cards fit in all base plate locations. Base plate is engraved with the appropriate marker card dimensions for each location.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTSSWIEL (see figure 7, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the S + S / Wieland Base Plate by placing the two pins in the base plate through the holes in the plotter bed.
4. Calibrate the plotter for the S + S / Wieland base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Mount marker card(s) and plot.
   Note, not all marker cards fit in all base plate locations. Base plate is engraved with the appropriate marker card dimensions for each location.

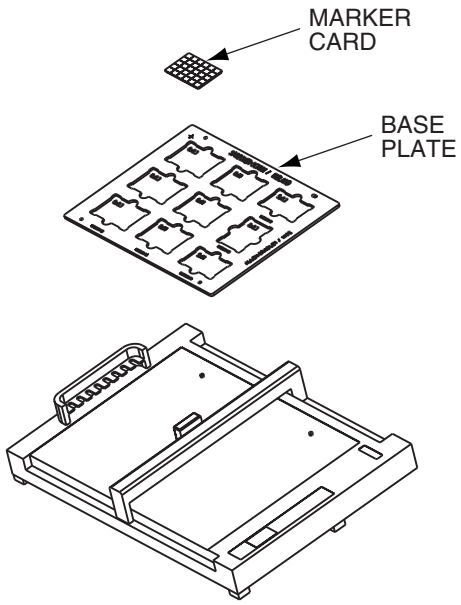

FIG. 7

WAGO

1492-PLTWAGO,
1492-WPLTWAGO

To setup the 1492-PLTKIT Plotter Using 1492-PLTWAGO (see figure 8):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Wago Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
4. Calibrate the plotter for the Wago base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Insert the appropriate holder for the Wago marker cards you intend to plot on.
6. Mount marker card(s) and plot.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTWAGO (see figure 8, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Wago Base Plate by placing the two pins in the base plate through the holes in the plotter bed.
4. Calibrate the plotter for the Wago base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
5. Insert the appropriate holder for the Wago marker cards you intend to plot on.
6. Mount marker card(s) and plot.

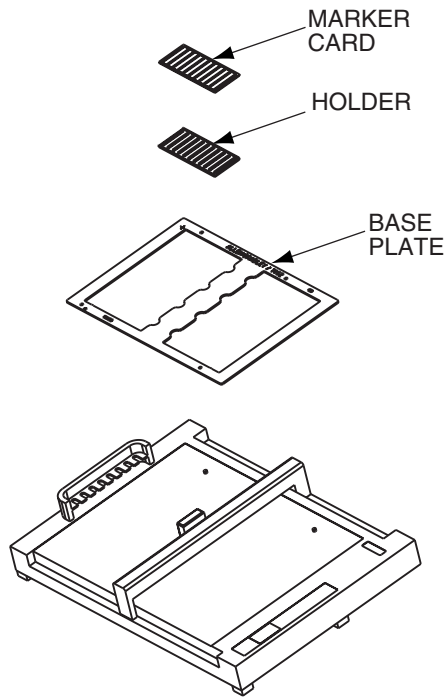

FIG. 8

WEIDMÜLLER

1492-PLATE2

To setup the 1492-PLTKIT Plotter Using 1492-PLATE2 (see figure 9):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the Weidmüller Base Plate Shim by guiding the two pins on the plotter bed into the holes in the upper area of the shim.
4. Install the Weidmüller Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
5. Calibrate the plotter for the Weidmüller base plate. (same as in user manual, except only one point in upper left, and no need for inserting spacer under base plate)
6. Insert the appropriate spacer for the Weidmüller marker cards you intend to plot on. Note, there are 2 types of spacers for the Weidmüller plotting system. The spacers should provide support underneath the marker card so that is flat, and the frame of the marker card is resting on the base plate. If the spacer is too thick the frame of the marker card will not rest on the base plate. If the spacer is too thin, there will be excessive air space under the markers. In either case the plotter will not function properly.
7. Mount marker card(s) and plot.

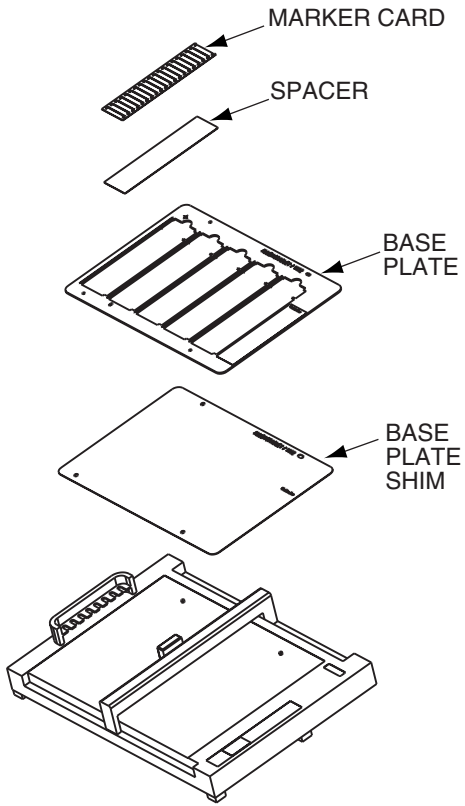

FIG. 9

MURR PLASTIK
1492-PLTMURR,
1492-WPLTMURR

To setup the 1492-PLTKIT Plotter Using 1492-PLTWAGO (see figure 10):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the MURR PLASTIK Base Plate by guiding the two pins on the plotter bed into the holes in the upper periphery of the base plate.
4. Calibrate the plotter for the MURR PLASTIK base plate. (same as in user manual, except no need for inserting spacer under base plate)
5. Insert the appropriate holder for the MURR PLASTIK marker cards you intend to plot on.
6. Mount marker card(s) and plot.

To setup the 1492-WPLTKIT Plotter Using 1492-WPLTMURR (see figure 10, 1492-PLTKIT shown):

1. Follow the directions to set up and install your plotter per the WINABMS User Manual
2. Remove any previously installed Base Plate.
3. Install the MURR PLASTIK Base Plate by placing the two pins in the base plate through the holes in the plotter bed.
4. Calibrate the plotter for the MURR PLASTIK base plate. (same as in user manual, except no need for inserting spacer under base plate)
5. Insert the appropriate holder for the MURR PLASTIK marker cards you intend to plot on.
6. Mount marker card(s) and plot.

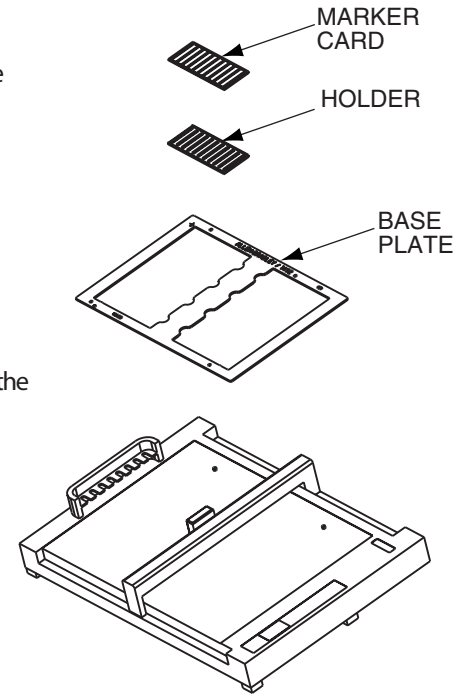

FIG. 10

40063-373-01 (5)
Printed in U.S.A.

Rockwell Automation